


WARING COMMERCIAL®



8011EB / Europe 220 Volt Base Unit ONLY

8011EG / Europe 220 Volt Glass Container


8011ES / Europe 220 Volt Stainless Steel Container

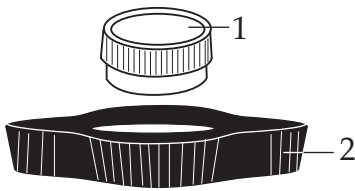


004315
2 Piece Lid
for Glass Container

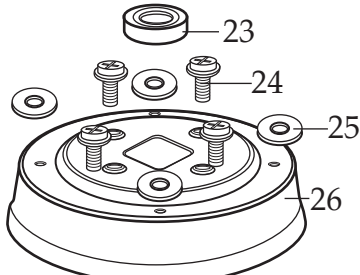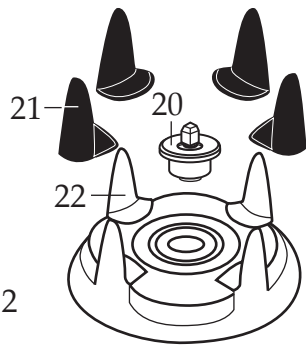

500665
2 Piece Lid
for Stainless Steel Container

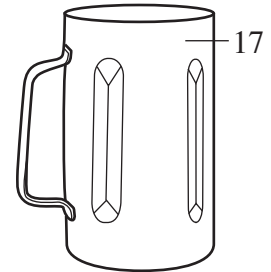


003548
Blending Assembly
(same as glass container)

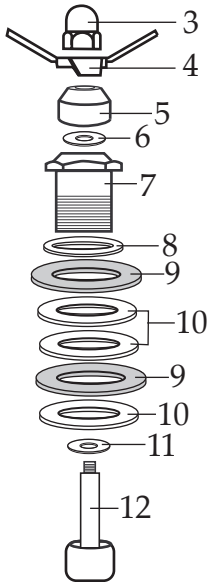

003559
Drive Coupling
(parts that can be purchased separately)






500758
Stainless Steel Container
with Blending Assembly

008065
Stainless Steel Container
with Blending Assembly and Lid

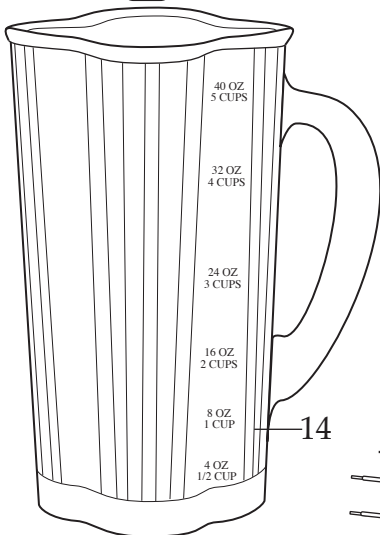

003548
Blending Assembly


500204
Container
with Blending Assembly

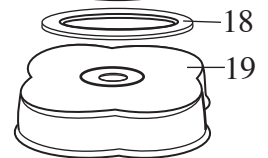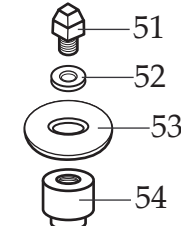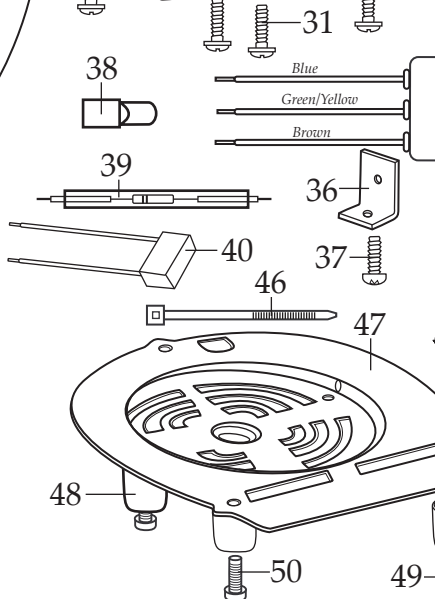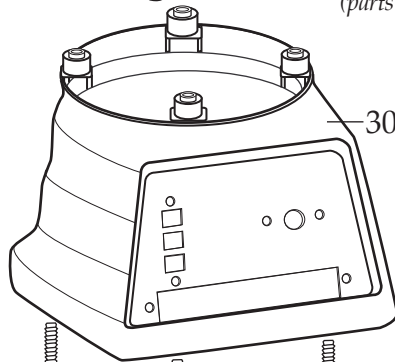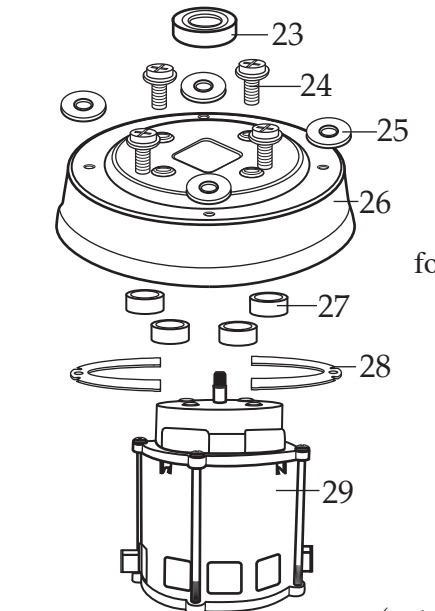


003548
Blending Assembly
(same as glass container)

500758
Stainless Steel Container
with Blending Assembly

008065
Stainless Steel Container
with Blending Assembly and Lid

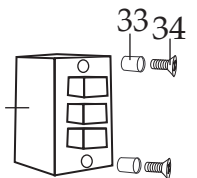

010163
Name Plate



Catalog	Older Model	Current & 2nd Generation Model
8011EB	38BL41	HGB2WT
8011EG	38BL41	HGB2WTG4
8011ES	38BL41	HGB2WTS3



Illustration #	Part #	Description
1	003146	Center Lid
2	003574-09	Outer Lid
3	003504	Cap Nut
4	024204	Blade
5	003503	Bearing Cap
6	003508	Fairprene Washer
7	010012	Bearing Holder
8	009724	Nylon Washer
9	003537	Stainless Steel Washer
10	003509	Neoprene Washer (rubber)
11	003510	Bakelite Washer
12	003500	Drive Shaft
13	009780	Hex Nut
14	003573	40 oz. Glass Jar (5 cups)
15	011700	Center Lid
16	013443	Outer Lid
17	012860	32 oz. Stainless Steel Jar
18	009762	Gasket
19	015055	Container Adapter
20	003559	Drive Coupling
21	003498	Jar Pad (4 required)
22	018996	Jar Holder
23	018596	Housing Seal
24	003578	Sems (4 required)
25	003538	Fiber Washer (4 required)
26	017290	Plated Motor Bracket
27	026080	Motor Spacer (4 required <i>current production & 2nd generation</i>)
28	025663	Baffle
	003513	Baffle (<i>older units</i>)
29	503306	Motor
	502852	Motor (<i>older units</i>)
30	010416	Base (top housing)
31	005240	Sems (4 required)
32	016043	Switch
33	003580	Spacer (2 required)
34	007783	Screw (2 required)

Catalog	Older Model	Current, 2nd & 3rd Generation Model
8011EB	38BL41	HGB2WT
8011EG	38BL41	HGB2WTG4
8011ES	38BL41	HGB2WTS3

Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
www.waringcommercialproducts.com

Illustration #	Part #	Description
35	502752	EMI Filter Assembly
36	026257	EMI Filter Bracket
37	026310	Screw (2 required)
38	012409	Crimp Connector (4 required) (2 required <i>older models</i>)
39	502763	Resistor Assembly (<i>current production 3rd & 2nd generation</i>)
40	026264	Capacitor
	502795	Capacitor & Lead Assembly (<i>2nd generation</i>)
41	502767	Brown Lead Assembly (<i>current production 3rd & 2nd generation</i>)
42	013680	Strain Relief
43	501827	Cord Set
	501842	Cord Set (<i>2nd generation & older units</i>)
44	002943	Washer (5 required ground to bottom plate)
45	013659	Sems (2 required ground to bottom plate)
46	013731	Cable Tie (5 required) (6 or 4 required <i>older units</i>)
47	025667	Bottom Plate ONLY
	026309	Bottom Plate ONLY has hole for reset switch (<i>2nd generation OBSOLETE</i>)
	502806	Bottom Plate Assembly with cord & emi filter
	019196	Bottom Plate ONLY (<i>older units</i>)
	501980	Bottom Plate with cord, reset switch, emi filter (<i>older units</i>)
48	503376	Foot and Screw Assembly (2 required <i>current production</i>)
	002891	Foot (1 required <i>current production</i> - 3 required <i>3rd, 2nd generation & older units</i>)
49	026681	Screw (1 required <i>current production, 3rd & 2nd generation</i>)
50	003569	Screw (2 required <i>3rd & 2nd generation</i>) (3 required <i>older units</i>)
51	003515	Square Drive Stud
52	003507	Stainless Steel Washer
53	003514	Slinger
54	003558	Coupling

Items Not Shown (*older units*)


- 016436 - Lock Nut
- 016459 - Screw
- 002884 - Rectifier (diode)
- 015902 - Snap Bushing
- 501912 - Green/Yellow Lead Assembly

Items Not Shown (*2nd generation*)


- 017239 - Sems (ground to motor)
- 003533 - Washer (ground to motor)
- 502864 - Green/Yellow Lead Assembly
- 502753 - Brown Lead Assembly

Catalog	Older Model	Current, 2nd & 3rd Generation Model
8011EB	38BL41	HGB2WT
8011EG	38BL41	HGB2WTG4
8011ES	38BL41	HGB2WTS3

Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
 www.waringcommercialproducts.com

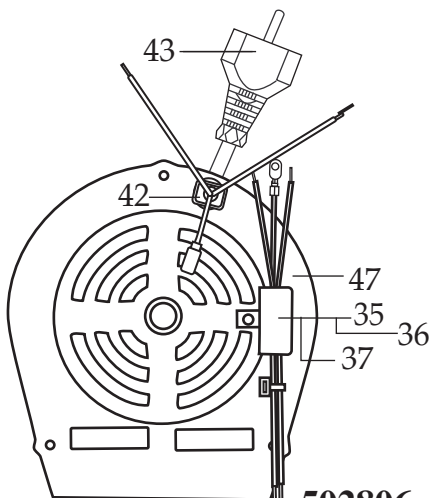


502806
 Bottom Plate Assy.
 (current production)

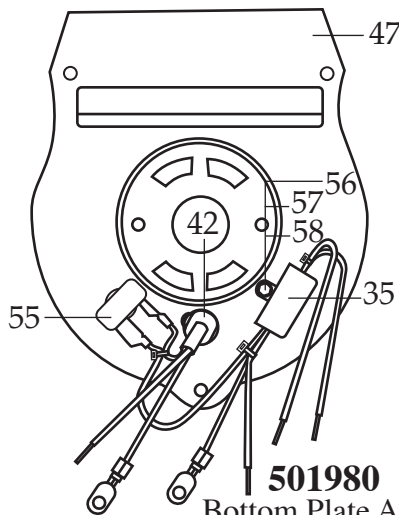


501980
 Bottom Plate Assy.
 (older units)


Illustration #	Part #	Description
55	026299	Reset Switch (comes with hex nut 2nd generation)
	018455	Reset Switch (use 014604-Washer 2 required & 015184-Hex Nut older models)
56	002943	Washer (emi filter with no bracket)
57	013270	Screw (emi filter with no bracket)
58	002944	Hex Nut (emi filter with no bracket)

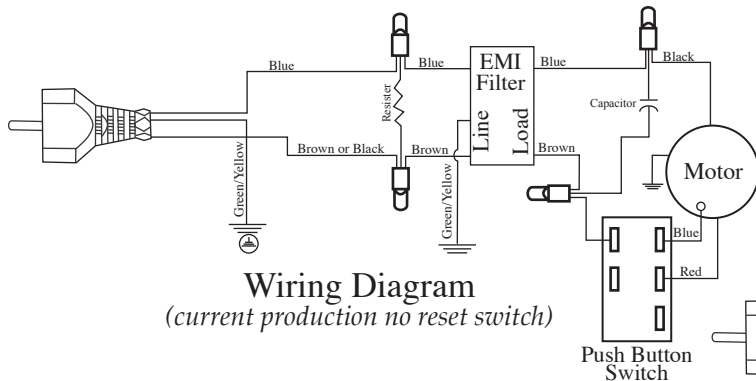


Wiring Diagram
 (current production no reset switch)

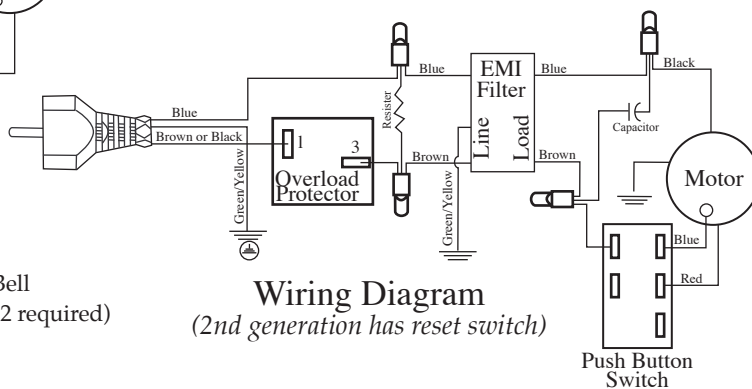

Wiring Diagram
 (2nd generation has reset switch)

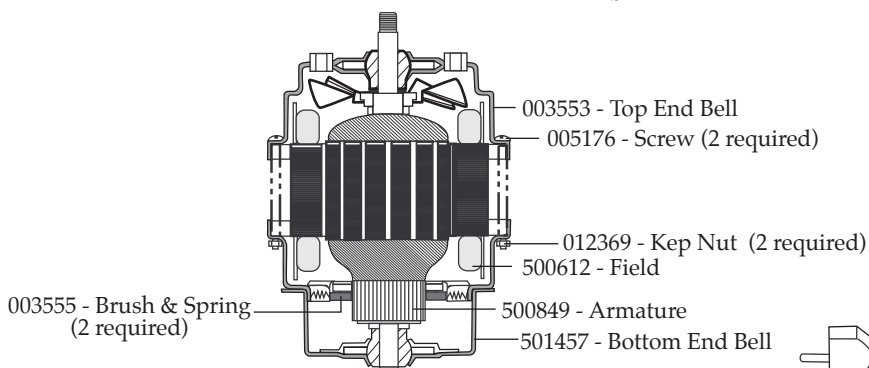

704618 Motor Assembly No Longer Available
 older units
 Limited Availability On Parts

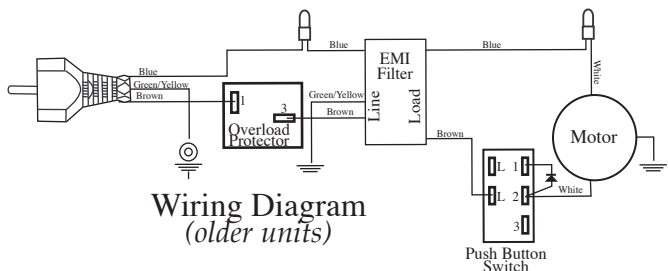

Wiring Diagram
 (older units)