

WARING COMMERCIAL®

Europe Variable Speed Blenders


LB20EG / glass container

LB20ES / stainless steel container

Unit Information

220-240V – 50/60Hz – 400W
(on units after 5/8/2015)

230V – 50Hz – 375W

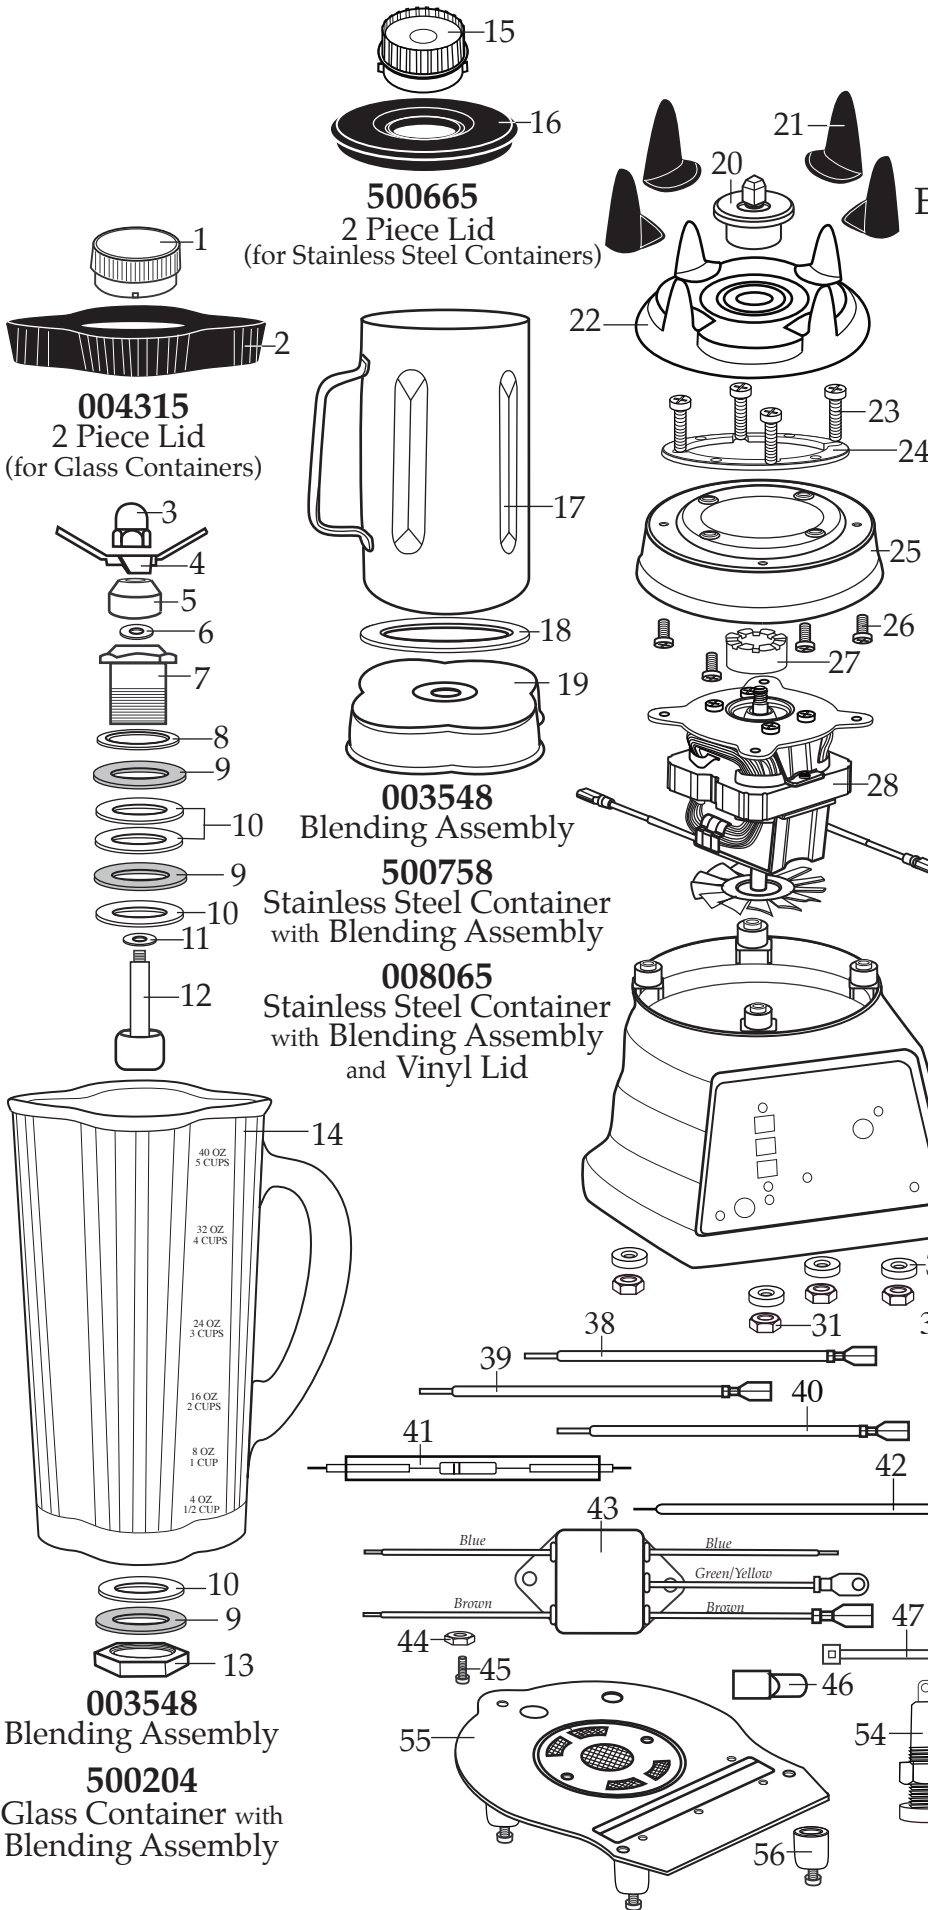

500665
2 Piece Lid
(for Stainless Steel Containers)

004315
2 Piece Lid
(for Glass Containers)

003548
Blending Assembly

500758
Stainless Steel Container
with Blending Assembly


008065
Stainless Steel Container
with Blending Assembly
and Vinyl Lid

003548
Blending Assembly

500204
Glass Container with
Blending Assembly

002644 Square Drive Stud
003507 Washer
003514 Slinger
035500 Coupling

503473
Drive Coupling
(on units after 5/8/2015)
parts that can be purchased separately

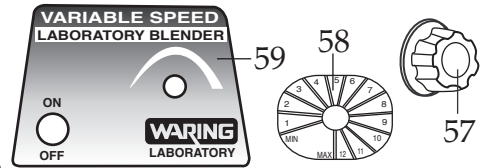

LB20EG
LB20ES

Same

38BL67

(on units after 5/8/2015) (on units after 4/6/2001)
220-240V – 50/60Hz – 400W 230V – 50Hz – 375W



Illustration #	Part #	Description
1	003146	Center Lid
2	003574-09	Outer Lid <i>(changed after 3/13/2007)</i>
3	003504	Cap Nut
4	024204	Blade <i>(changed after 7/11/2006)</i>
5	003503	Bearing Cap
6	003508	Fairprene Washer
7	010012	Bearing Holder
8	009724	Nylon Washer
9	003537	Stainless Steel Washer
10	003509	Neoprene Washer
11	003510	Bakelite Washer
12	003500	Drive Shaft
13	009780	Hex Nut
14	003573	40 oz. Glass Container (5 cups)
15	011700 003146	Center Lid <i>(on units after 8/11/2011)</i> Center Lid
16	013443	Round Outer Lid
17	012860	32 oz. Stainless Steel Container
18	009762	Gasket
19	015055	Container Adapter
20	503473 002518	Drive Coupling Assembly <i>(on units after 5/8/2015)</i> Drive Coupling Assembly
21	003498	Jar Pad (4 required)
22	018996	Jar Holder
23	034411 012370	Screw (4 required <i>on units after 5/8/2015</i>) Screw (4 required)
24	035357 016610	Upper Spacer <i>(on units after 5/8/2015)</i> Half Baffle (2 required)
25	017283	Plated Motor Bracket
26	033787	Screw (4 required <i>on units after 5/8/2015</i>)
27	035339 019936	Housing Seal <i>(on units after 5/8/2015)</i> Housing Seal
28	035058 026536 024147	ECM Tapped Motor <i>(on units after 5/8/2015)</i> ECM Motor <i>(on units after 5/5/2009)</i> ECM Motor <i>(changed after 6/5/2001)</i>
29	019943	Base
30	002676	Spacer (4 required <i>on units after 5/8/2015</i>)

LB20EG
LB20ES

Same

38BL67

(on units after 5/8/2015) (on units after 4/6/2001)
220-240V – 50/60Hz – 400W 230V – 50Hz – 375W



Illustration #	Part #	Description
31	002881	Keyp Nuts (4 required <i>on units after 5/8/2015</i>) (1 required <i>on units after 4/11/2001</i>) (6 required)
32	502735 502219	Toggle Switch Assembly (<i>on units after 6/5/2001</i>) Toggle Switch Assembly
33	014604	Lock Washer
34	016236 015098	Hex Nut (<i>on units after 4/16/2010</i>) Ring Nut
35	019394	Speed Control with Potentiometer
36	010955	Washer (4 required)
37	019181	Screw (4 required)
38	502737	Black Lead Assembly (3 required)
39	502767	Brown Lead Assembly (<i>on units after 5/8/2015</i>)
40	502738	Blue Lead Assembly
41	502763	Resistor Assembly (<i>on units after 5/8/2015</i>)
42	501658	Green-Yellow Lead Assembly (<i>on units after 5/8/2015</i>)
43	503475 502448	EMI Filter Assembly (<i>on units after 5/8/2015</i>) EMI Filter Assembly
44	015097	Hex Nut (2 required)
45	019181	Screw (2 required)
46	012409 019123 012409 012409	Small Crimp Connector (2 required <i>on units after 5/8/2015</i>) Large Crimp Connector (2 required <i>on units after 5/8/2015</i>) Small Crimp Connector (4 required <i>on units after 2/12/2009</i>) Small Crimp Connector (3 required)
47	013731	Cable Tie (5 required)
48	002943	Washer (2 required <i>on units after 5/8/2015</i>) (3 required)
49	027278 013659 018317	Ground Screw (2 required <i>on units after 5/8/2015</i>) Screw (2 required <i>on units after 4/11/2001</i>) Screw (2 required)
50	016042	Washer (2 required <i>on units after 3/25/2003</i>) (3 required)
51	013680	Strain Relief
52	503476 501842	Cord Set (<i>on units after 5/8/2015</i>) Cord Set
53	035386	4A Fuse Cartridge (<i>on units after 5/8/2015</i>)
54	035186	Fuse Holder (<i>on units after 5/8/2015</i>)
55	502736	Bottom Plate with Screen
56	503376 002891	Foot & Screw Assembly (3 required <i>on units after 6/28/2010</i>) Foot (3 required uses 003569 screw <i>NO Longer Available</i>)
57	019270	Potentiometer Knob

LB20EG
LB20ES

Same

38BL67

(on units after 5/8/2015) (on units after 4/6/2001)
220-240V - 50/60Hz - 400W 230V - 50Hz - 375W

Waring Factory Service Center
314 Ella T. Grasso Ave.
Torrington, CT 06790
Tele. 1-800-269-6640

COMMERCIAL

Fax 860-496-9017
www.waringcommercialproducts.com


Illustration # Part # Description

58	025665	Increments Overlay
59	023052	Name Plate


Parts No Longer Use (on units before 3/3/2016)

- 024377 - Insulating Sleeve
- 014603 - Locking Ring
- 018455 - Reset Switch (Obsolete)
- 015184 - Hex Nut
- 010955 - Washer (2 required with EMI Filter)
- 002644 - Square Drive Stud
- 003507 - Washer
- 003514 - Slinger
- 002882 - Coupling
- 002518 Drive Coupling (parts that can be purchased separately)
- 016610 - Baffle (2 required)
- 012370 - Screw (4 required)
- 012369 - Kep Nut (4 required)
- 026536 ECM Motor
- 005240 - Screw (4 required)

Wiring Diagram
(on units after 5/8/2016)

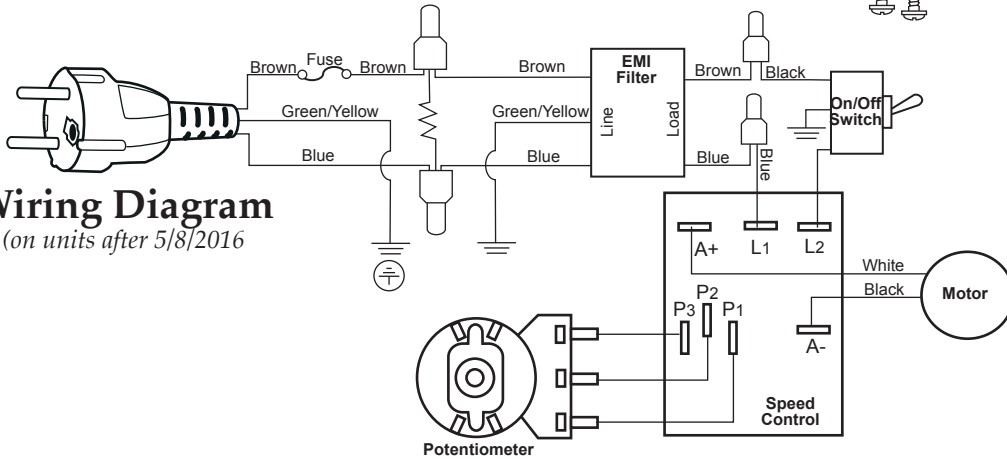

Wiring Diagram
(on units after 2/12/2009)

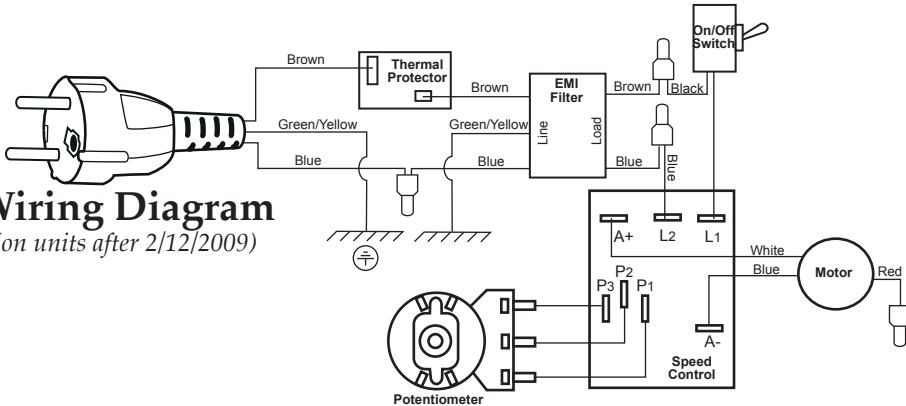

Wiring Diagram

